


LAND CRUISER 300 GR SPORT

Item code : VOLTA 5077

Children's electric toy car installation and operating manual electric toy car

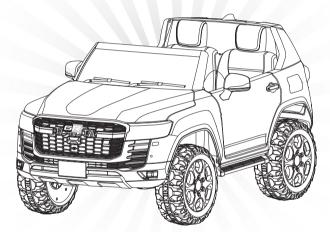



Manual Instructions

Pictures are only for reference. Please read this book before installation and operation. after reading, please keep this book for later using.



Thank you for choosing our vehicle. Each part of the vehicle is designed using a unique model

As a vehicle that is imitated in a real and unique way, which can bring fun and different feelings to your children

Suitable for ages	37 - 96 months	Load capacity	< 35 Kg
Speed	3,5 - 4,5 KM/H	Vehicle size	124 X 77 X 63 cm
Charger	In : 220v 50 Hz Out : 12V	Battery versi	12 V 7 AH
Power	Recharging type	Charging time	8 - 12 hour
Fuse	10 A	Average battery 6 - 12 mont	

Read carefully and follow all directions



BE CAREFUL

Assembly / Use :

- The product requires an adult to assemble. Children can be injured by small parts Sharp edges and sharp parts on assembled vehicles Be careful when opening or assembling a vehicle, children should not handle parts or help assemble the vehicle Always handle protective materials and polybags properly before assembling. children are prohibited from playing because it is dangerous / Nuitable for children aged 37 - 96 months, and the maximum weight of use is 35 kg Choking hazard to small parts, this product is prohibited for children under 3 years. Direct adult supervision is required. Don't leave your child unattended. always supervise the child while in the vehicle. Teach appropriate safety rules to your child before operating this vehicle, this rule must be applied to other players who wish to drive this vehicle. Make sure children know and monitor the safety rules for driving :
 - Always wear footwear
 - Always sit in place
 - Always wear a helmet while driving
 - Only 1 driver while playing

Keep children from unsafe driving, areas A. large road / alley

- B. Incline / sloping surfaces / pools
- C. Only for outdoors. Generally flat surface / playground / paved park
- Do not play in the dark. Children can pass through obstacles Unexpected and be I injured. Use during the day or in the light areas

/ \mathbb{N} Adult should check and maintain that all components are in good condition

To avoid damage to the motors and gears, stop the vehicle before changing from / forward to reverse.

- Please select "O" when not driving, turn Į
- off the power switch. (Warning: this button only to control the driving section)
- Do not allow other children to touch the wheel when the vehicle I is movina.
- These vehicles are equipped with seat belts, please teach children how buckle before use.
- Do not exceed the maximum capacity of 35 kg.



Battery / Charger / Alkaline Batteries:

 ▲
 Battery / charger / alkaline batteries are not toys.

 ▲
 Do not recharge a.

 non-rechargeable battery.
 ▲

 ▲
 Do not mix old batteries and new batteries or batteries of the type different alkaline standard (carbon-zinc) or rechargeable batteries (nickel-cadmium).

 ▲
 Remove The rechargeable battery from the vehicle before recharging.

 ▲
 Remove the battery when not in use for a long period of time.

 I
 Do not create a short circuit in the battery terminals.

 ▲
 Do not open the battery and charger.

 ▲
 Do not open the battery in reverse.

 ▲
 Battery care, Always keep dry.

Charger:

/ Recharge 4-6 hours before the first use, but do not recharge more than 10 hours.




- When the vehicle speed becomes slow recharge the battery
- for 8-12 hours, do not recharge the battery for more than 18 hours.

Separate batteries, chargers and connectors to avoid shortage every time you charge the battery. If damaged or overused do not use the charger until you have replaced the missing or damaged batteries and parts.

- Recharge the batteries in a dry place.
- Recharge the battery at least once a month, even if the vehicle not used.



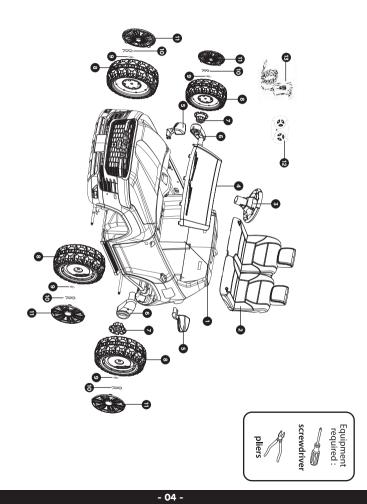



Riding vehicles will provide a comfortable driving experience. To help ensure that you and your driver drive safely, We ask that you read this manual carefully and save it for later reference.

Follow the recommendations in this manual, which are made for safety and the operation of your riding vehicle

1	Vehicle body	9	Ring wheel
2	Seat	10	Cutter pin
3	Steering wheel	11	Velg
4	Windshield frames	12	Remote
5	Rear view mirror	13	Charger
6	Gearbox	14	
7	Wheel Extension	15	
8	Wheel	16	



Pay attention and follow the installation instructions below :




1. Wheel installation

Insert the wheel and ring, locked it with the cutterpin, then install the wheel rim until it locked, do the same thing on each front and rear wheel as follows example image beside.



2. Wheel installation

Install the gearbox on the axle then insert the wheel and ring, locked it with the cutterpin, then install the wheel rim until it locked, do the same thing on each front and rear wheel as follows example image above.

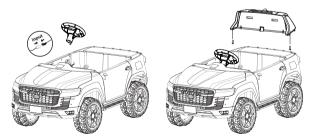


3. Installation of steering wheel and rear body

Connect the steering socket to the body then position the steering wheel on the push steering axle until it locked. Then position the rear body frame on the main body of the vehicle, If it is appropriate, press until it locks then tighten with screws




Pay attention and follow the installation instructions below :

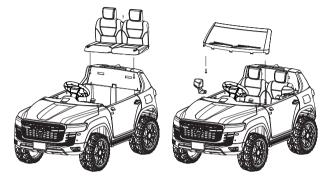

4. Installation of seats, windshield & mirrors

Attach the seat to the car by securing it with screws, for the windshield frame Position it on the car then press until it locked

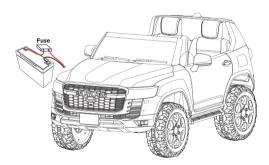

5. Battery installation

Insert the red cable into the red + column, then leave the black cable in the black - column. (ignore this condition if the battery path is installed)





Power button, forward / reverse button, manual RC button, speed button high / low on the instrument platform.

Power button: Press the power button to unlock and it will turn off it pressed again Manual switch: Forward

- 1. Push the forward switch
- 2. Step on the pedal, the vehicle will move forward

Backward

- 1. Push the switch reverse
- 2. Step on the pedal, the vehicle will move backward

Remote controller :

1. Press the RC button

- 2. Then an adult can adjust the direction of the vehicle Speed button, fast / slow
- 1. Press the fast / slow speed button to get fast speed / slow speed
- Press forward / reverse vutton for forward / reverse position. step on the pedal, the vehicle will move forward or backward at fast / slow speed. When using the remote control, press the speed button to adjust the speed.


For children's safety, parents have to make sure their children are have good driving ability at high speed


Music Press the music button, the music will turn on. If not pressed back, then music will stop automatically



Don't put your ear too close, could cause hearing damage



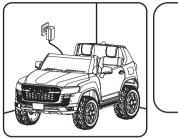

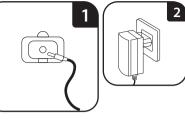

- 1. The vehicle charging input socket is under the front of the seat, plug the charger port into the input socket
- 2. Plug the charger plug into the wall outlet as shown.
- 3. After 8 12 hours fully charged, unplug the charger plug from the wall outlet and unplug the charger port from the input socket on the vehicle

Maintenance For Your Vehicle

- The vehicle material is made of polypropylene. use exposed to light direct sun or temperatures of -15 C are strictly prohibited. Vehicles must be kept away from hot objects, such as ovens and heaters, the plastic parts can melt.
- 2. Avoid operating the vehicle in wet or snowy conditions, and don't spray the vehicle with a hose. Do not wash the vehicle with soap and water. Water or moisture on the motor or electric switch can corrodes and can cause buttons or motors to be damaged
- 3. Avoid operating the vehicle on sand, dirt or gravel, because it can causes the button or motor to fail.
- 4. The vehicle can be cleaned with a soft, dry cloth for good results
- 5. Do not modify the electrical system, when errors are found it must be addressed by professionals. Changes can cause fire resulting in injury serious and can damage the electrical system
- 6. Use for half a month, check whether the wheel rotates properly or not. Use lubricant to lubricate moving parts.

Troubleshooting & Solutions Guide

 
Problem: Vehicles cannot run

• Cause: The battery might not have any power after use and at least once a month, recharge the battery for 8-12 hours, Don't charge for more than 18 hours



Cause: The terminal fuse was dropped. The vehicle is equipped with a restart system self-fusing when the vehicle is overloaded or in improper use

correct, the system restart the fuse itself will disconnect for 2 minutes before it can operate again. The fuse restart system itself is located under the seat.



- Cause: The connector or connector cable was loose make sure the battery connectors are securely attached to each other
- Cause: the battery is dead please contact the distributor
- Cause: The rusank electrical system please contact the developer or factory
- Cause: The motor is damaged needs professional repair. Please contact the distributor

Problem: The battery cannot be recharged

- Cause: The battery connector or adapter connector was loose make sure the battery connector and adapter are seated together properly
- Cause: the charger is not plugged in make sure the charger is plugged into the wall socket and confirm the power on the socket is on
- Cause: The charger was not working Does Charger feel warm when recharging? if not, the charger may be damaged and please call distributor
 Problem: the vehicle cannot run for long

Cause: the battery might need to be recharged

 You may not have recharged the battery for a long time. After each use, or at least once a month, recharge the battery for 8-12 hours. Do not recharge for more than 18 hours





Don't throw it in the fire. Batteries may explode or leak


Batteries with a lead acid seal must be recycled or disposed of in an environmentally friendly place

Warning :

- 1. This product is not a means of transportation, do not drive on the road, use this product under adult supervision.
- 2. Do not allow children under 36 months to use this product.
- 3. Overload is not allowed. maximum load 35 kg
- The vehicle must be assembled and inspected by an adult,
- Do not wash the product with water, wipe only with use a soft, damp cloth
- Recharging the battery must be done by an adult, don't let children charge battery.
- 7. Driving is prohibited on public roads, downhill roads, pool sides, head of stairs and other dangerous areas.
- Please read carefully and keep the user manual for your child's safety.
- To prevent children from shortness of breath, keep the plastic from children
- 10.Only adults may operate the remote control, and keep a distance of up to 10 m for the remote controller and the vehicle.



Only adults may use the remote control

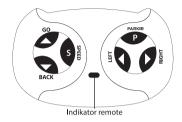

2.4G Remote control instrucktions

Step 1: The remote controller is loaded with AAA batteries

Step 2: Turn off the power switch on the vehicle.

Step 3: Hold down "▲"&"▼" keys for 3 seconds start match code, the frist LED flicker,

now turn on vehicle power switch

the red indicaror light stop flashing and the code is successful.

key caption : "S" set up speed, 1 led lit up is low speed, 2 leds lit up is medium speed, 3 leds lir up is high speed, "A"forward, "Vback, "A" left, "P" right, press "P" key hold the brake, ALL LED flicker

Instructions: The vehicle is designed to operate at low speed only in reverse let the remote controller stop for 10 seconds it will trun off automatically repeat step 1 when you replace the remote controller battery



Limited Warranty

General:

- Part or model specifications are subject to change without notice.
- This Limited Warranty is the only warranty for the product. There are no other express warranties.
- The only uses for this product are described in this manual.
- · Warranty registration is not required.
- The Limited Warranty extends only to the original consumer and is not transferable to anyone else.

What does this Limited Warranty cover?

This Limited Warranty covers all parts of the product except those indicated below as not warranted.

What must you do to keep the Limited Warranty in effect?

This Limited Warranty is effective only if:

- Product is completely and correctly assembled.
- Product is used under normal conditions for its intended purpose (see the following section for excluded activities).
- · Product receives all necessary maintenance and adjustments.
- Product is used for general transportation and recreational use only.

What is not covered by this Limited Warranty?

This product is designed for recreational use only. This Limited Warranty does not cover normal wear and tear, normal maintenance items, or any damage, failure, or loss that is caused by improper assembly, maintenance, adjustment, storage, or use of the product.

 
This Limited Warranty will be void if the product is ever:

- Used in any competitive sport
- Used for stunt riding, jumping, aerobatics or similar activity
- Modified in any way
- Modified with the addition of a motor
- Ridden by more than one person at a time
- Rented, sold, or given away
- Used in a manner contrary to the instructions and warnings in this
- Owner's Manual

How do you get service?

Contact the Customer Service Department. Email- enquiries@idealsources.com.au Website- www.idealsources.com.au





Toyota Land Cruiser 300 GR Sport and other associated mark emblems and designs are intellectual property of Toyota Motor Corporation and used with permission. *Licensee: Pinghu Tongsheng Trading Co., Ltd*

Produced by PT.Sinar Harapan Plastik Imported by IDEAL SOURCES

> Made in Indonesia www.shptoys.com